

NEW Products








Technical Data



محافظ هوشمند ولتاژ/جریان/مصرف انرژی

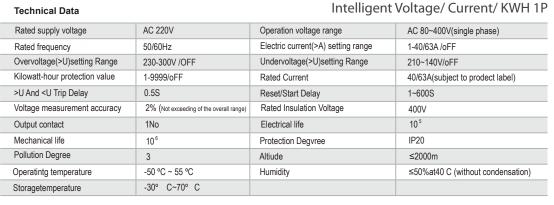


ISP2-VAKWH

Default setting

Technical Parameter	Setting range	Step	Factory Setting	
Over-Voltage Protection Value	AC230V-300V/oFF	1V	AC280V	
Under-Voltage Protection Value	AC210V-140V/oFF	1V	AC160V	
Recovery delay time	1S-600S	1\$	5S	
Over-current protection value	1-40/63A/oFF	0.1A	63A	
Continuous over-current protect times	1-20/OFF	1	oFF	
Kilowatt-hour protection value	1-9999/oFF	1	300 300	


Current Specification	15A	25A	32A	50A	63A
Rated Operatting current(In,A)	15	25	32	50	63
Max Operating Current Imax (A,within 10 min)	25	30	40	60	80
Max power of load (KW)	3.6	5.5	7	11	13.9

Function setting

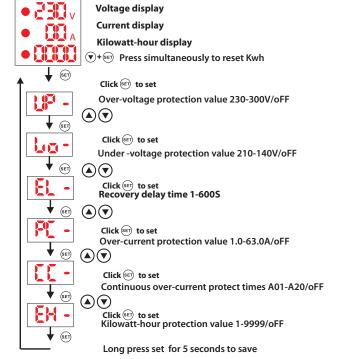

To adjust the figure quickly by long time press the add or subract key

Wiring and shape dimension

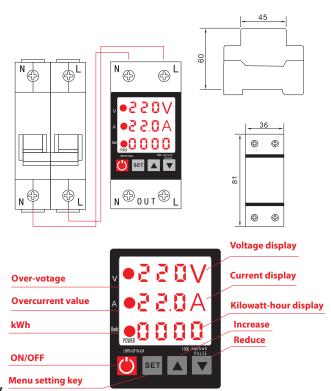

(A) (V)







محافظ هوشمند ولتا ثكفاز

Intelligent Voltage1P



Rated supply voltage	AC 220V	Operation voltage range	AC 80~350V
Rated frequency	50/60Hz	Overvoltage(>U)setting Range	230~300V
Overvoltage(>U)setting Range	210~140V	Rated Current	40/63A(subject to prodect label)
>U And <u delay<="" td="" trip=""><td>0.5S</td><td>Reset/Start Delay</td><td>1~600S</td></u>	0.5S	Reset/Start Delay	1~600S
Voltage measurement accuracy	2% (Not exceeding of the overall range)	Rated Insulation Voltage	400V
Output contact	1NO	Electrical life	10 ⁵
Mechanical life	10 ⁶	Protection Degvree	IP20
Pollution Degree	3	Altiude	≤2000m
Operatintg temperature	-50 °C ~ 55 °C	Humidity	≤50%at40 C (without condensation)
Storage temperature	-30°C~70° C		


ISP2-V

Default setting


Technical Data


Technical Parameter	Setting range	Step	Factory Setting
Over-Voltage Protection Value	230~300V	1V	280V
Under-Voltage Protection Value	210~140V	1V	160V
Recovery delay time	1~600s	1s	5s

Function setting

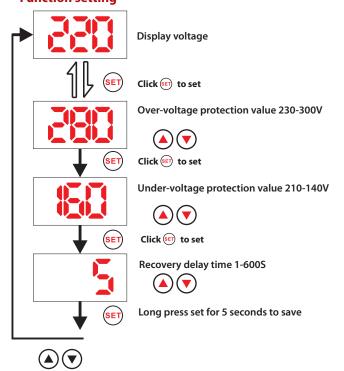

Wiring and shape dimension

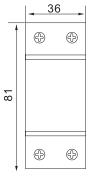

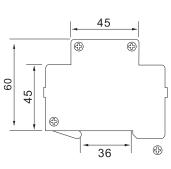

To adjust the figure quickly by long time press the add or subract key







ISV-3P ISV-1P


نمایشگرولتاژ تکفاز/سهفاز Intelligent Voltage Indicator 1P/3P


Technical Parameter

Voltage Display Range	AC 80V-500V
Frequency Range	AC 50~60Hz
Color	Red
Discrepancy Range	±2%
Rated Insulation Voltage	660V
Sampling Rate	1time /s
Input loop power consumption	≤2VA
Altitude	≤2000m
Ambient Temperature	-50 ~ 55 °C
Humidity	50% and 40° C Condensation free
Storage Temperature	-30 °C~70°C

• This project is prohibited using for frequency conversion, inverter, thr power environment with high harmonic interference.

Product Dimensions

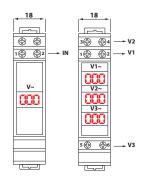

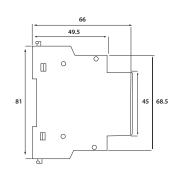

نمایشگرآمپرتکفاز/سهفاز Intelligent Amper Indicator 1P/3P


Technical Parameter

Supply Voltage / Frequency Range	AC 80V-500V / 50-60HZ	
Current Range	AC 0-100A	
Color	Red	
Discrepancy Range	±2%	
Rated Insulation Voltage	660V	
Sampling Rate	1time /s	
Input loop power consumption	≤2VA	
Altitude	≤2000m	
Ambient Temperature	-50 ~ 55 °C	
Humidity	50% and 40° C Condensation free	
Storage Temperature	-30°C ~70°C	

• This project is prohibited using for frequency conversion, inverter, thr power environment with high harmonic interference.

ISA-3P ISA-1P

Product Dimensions

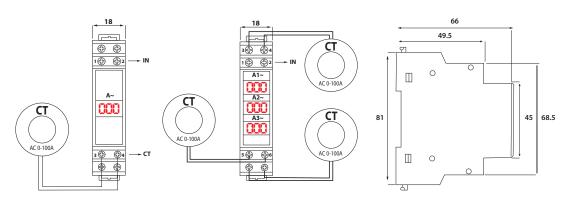







نمایشگرمولتیفانکشن ولتاژ/جریان/فرکانس/ضریبتوان/مصرفانرژی/توان Voltage/ Current/ Frequency/ PF/W/KWH 1P




Accuracy	1%±2 words
	AC voltage: AC 40.0-300.0V or AC 200.0- 450.0V(You should one type of the meter in your order)
	AC current: 0.1~99.9A (You should order current transformer when current is higher than 100A independent)
	Frequence:45.0Hz-65.0Hz
_	Power Factor:0.00-1.00PF
otherwise the electric power resolution is 1W. Electric Energy:0-99999kwh, the display of electric energy resolution is 0-999.99kwh, the display of electric energy resolution is 0.1kwh when m	Electric Power:0-450000W, the electric power resolution is 0.1W when measure electric power between 0-9999.9W, otherwise the electric power resolution is 1W.
	Electric Energy:0-99999kwh, the display of electric energy resolution is 0.01kwh when measure electric energy between 0-999.99kwh, the display of electric energy resolution is 0.1kwh when measur electric engery between 1000.0-9999.9kwh and the display of electric energy resolution is 1kwh when mwsure electric enegery larger than 9999.0kwh
Sampling rate	2 times per second
Size	54*80*64 mm
Installation	Din-rail

IS52-2066

Application Method

Technical Parameter

- 1- Connect the measure voltage to the 1 and 2 terminal
- 2- Connection of meter with internal current transformer as graph 1. Make the wire through the hole in the hole in the meteraand the direction chose arbitrarily.
- 3- Connections of meter with external current transformer as graph 2. Make the wire through the hole in the meter, and connect the two wires of the secondary transformer to the 3 and 4 terminal.
- 4- when power on, the meter disply the measure parameters.
- 5- when power on, you can press the button of SAM CK last for 5 seconds, then the electric energy will to be zero and start to cumulate when release the button.
- and when power off, the meter can save the value of electric energy and go on cumulating data when the meter power-on next.

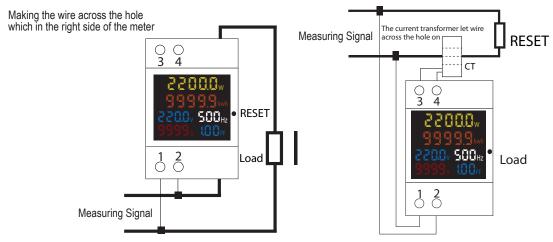

Graph2: Connet graph when AC current lower than 100A

Graph1: install current transformer





Technical Parameter



نمایشگرمولتیفانکشن(طرحسیگنال) ولتاژ/جریان/فرکانس/ضریبتوان/مصرفانرژی/توان Voltage/ Current/ Frequency/ PF/W/KWH 1P


	voltage, carrelle, frequency, frequency
accuracy	1%
Display mode	0.5 inch LED digital tube
Range	AC voltage:80~300V, 200~450V(You should select the one of measuring range in your order)
	AC current:0.1~99.9A(You should order current transformer when current is higher than 100A independent)
Sampling Rate	2 per second
Size	54*80*64 mm
Installation	Din-rail

• This project is prohibited using for frequency conversion, inverter, thr power environment with high harmonic interference.

Application Method

- 1- According to the wiring diagram, connect the plug two-wire of the current transformer to transformer the input on meter, make the curren returnconductor across the hold which in the middle of the current transformer.
- 2- Connect the voltage measurement to the voltage input terminal of the meter. then turn on and measure the voltage to start to read themeasure result.
- 3- the electric energy reset button is on the right- bottom of the meter. you can press the button with a needle last for.
- 4- Second, then the electric energy will be reset.

IS52-2066

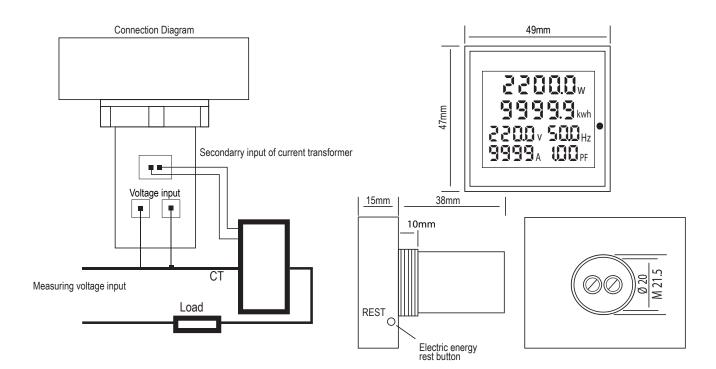

Attention

The meter with measure range between 250-450V can only use to measure 50Hz AC city electricity, it will be destroyed when use to measure aquare wave, output of inverter and correction sine wave. The meter with measure range between 50-300 not affected.